



SLIDING MIRROR MAKEUP VANITY SET

Assembly Instructions



Link to Warranty Registration



Link to Video Tutorial


You must register your warranty at prestigevanity.com/warranty within 24 hours of purchase for your 1-year manufacturer defect warranty to be valid.

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

Bench Parts - Steps ① to ④



(1) Bench Cover

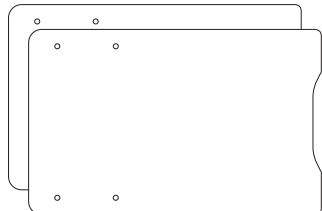

(2) Bench Sides



(2) Bench Rails

corner holes only go halfway through



(8) Short Phillips Head Screws



(2) Bench Brackets




(8) Long Phillips Head Screws




(8) Cam Inserts

Bench Assembly


STEP ① Secure 1 Bench Bracket to the Bench Rail with (2) Short Phillips Head Screws. Repeat for the second Rail.

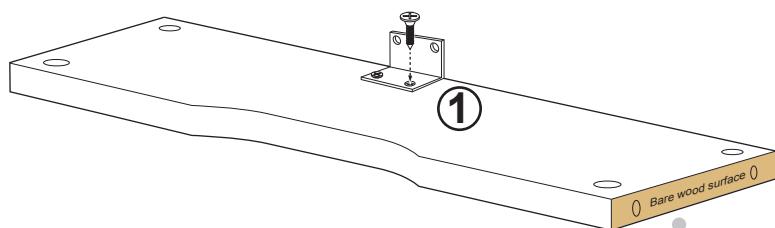


STEP ② Drop (4) Cam Inserts into the corner holes, making sure the circle faces out. Repeat for the second Rail.

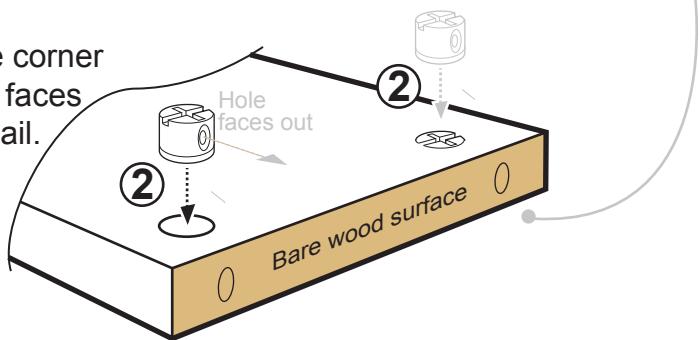

STEP ③ With the Bench Bracket and corner holes facing in, secure the Bench Rails to the Bench Sides with (8) Long Screws.

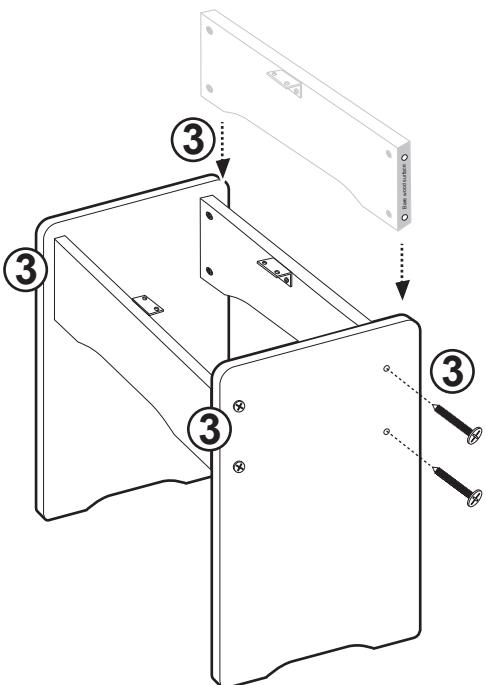

STEP ④ Use (4) Short Screws to secure the bottom of the Bench Seat to the Bench Bracket.

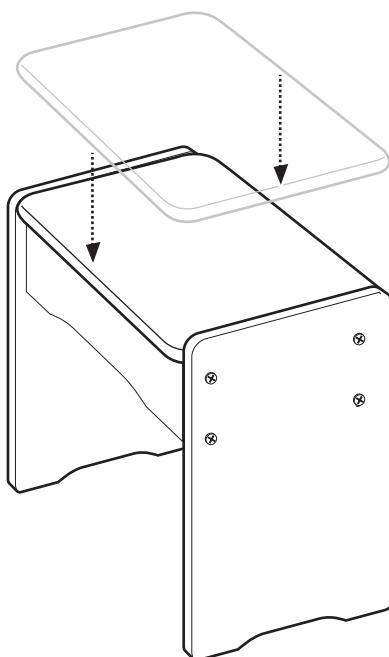

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

Drawers - Steps 5 to 16




(32) Cam Nuts




(32) Cam Bolts




(1) Desk Drawer Bottom




(3) Tower Drawer Bottom




(8) All Drawer Sides




(3) Tower Drawer Fronts



(3) Tower Drawer Backs

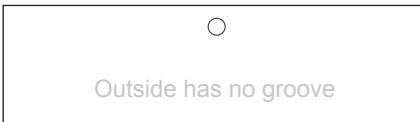

(1) Desk Drawer Front



(1) Desk Drawer Back



(6) Long Phillips Pan Head Screws



(4) Short Phillips Pan Head Screws




(3) Handles




(1) Lock

Drawer Assembly


Cam Nut and Bolt Operation

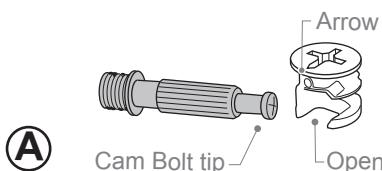

The open side of Cam Nut, indicated by the arrow on top, should face top of Cam Bolt.

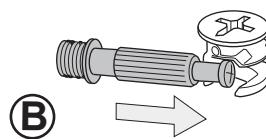

Tip of Cam Bolt fits in open side of Cam Nut.

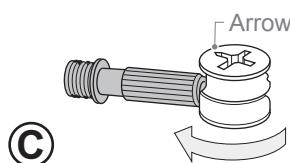

Cam Nut rotates 1/4 turn and grabs onto tip of Cam Bolt. Note the arrow has moved.


STEP 5

Please review the information in steps A, B and C above to become familiar with the function.

Working on the outside surface of the Drawer Side, drop a Cam Nut into each of the 4 holes.

Pay attention to the arrow on the top so the Cam Nut's open area faces out.

Repeat for the remaining 7 Drawer Sides and set all 8 to the side.

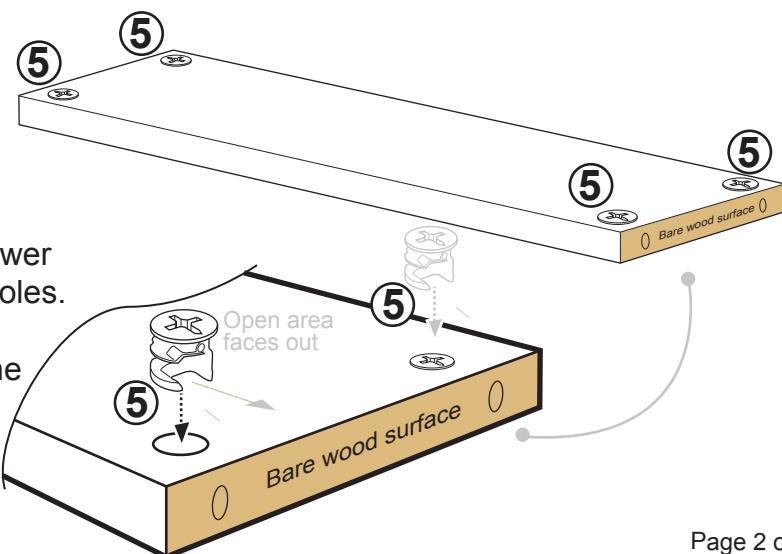


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

Drawers - Steps ⑤ to ⑯ continued

STEP ⑥

Working from the inside (groove) of the Tower Drawer Front, insert (4) Cam Bolts into the side holes.


Repeat for the remaining 2 Tower Drawer Fronts and set them aside.

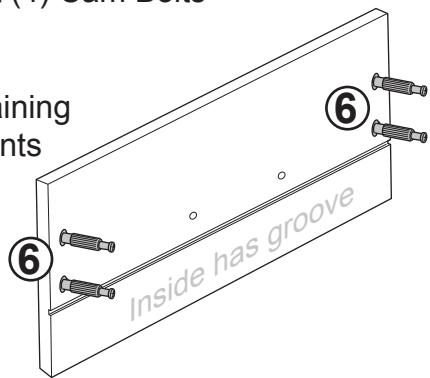

STEP ⑦

Working from the inside (groove) of the Tower Drawer Back insert (4) Cam Bolts into the side holes.


Repeat for the remaining two Tower Drawer Backs and set them aside.

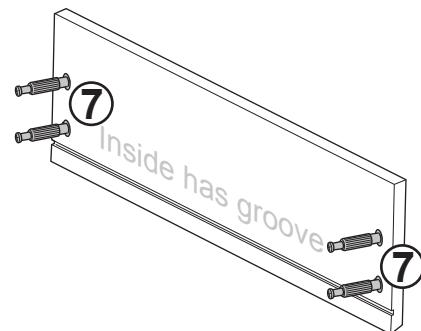

STEP ⑧

Secure two All Drawer Sides to one of the Tower Drawer Fronts (from step 6) by inserting the Cam Bolt into the edge holes and then turning the Cam Nut a 1/4 turn to grab the tip of the Cam Bolt.


Be sure the groove is to the inside.

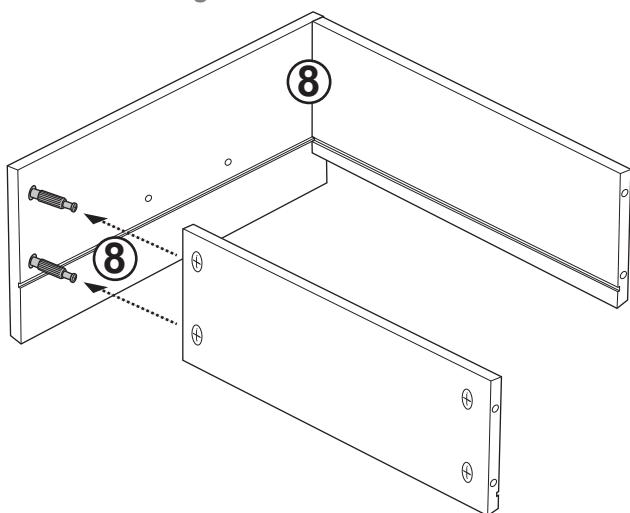

STEP ⑨

With the white surface up, align the edges of the Tower Drawer Bottom with the grooves on the Sides and slide it in.


Be sure the edge inserts into the front groove to prevent sagging. Repeat for the two remaining Tower Drawers.

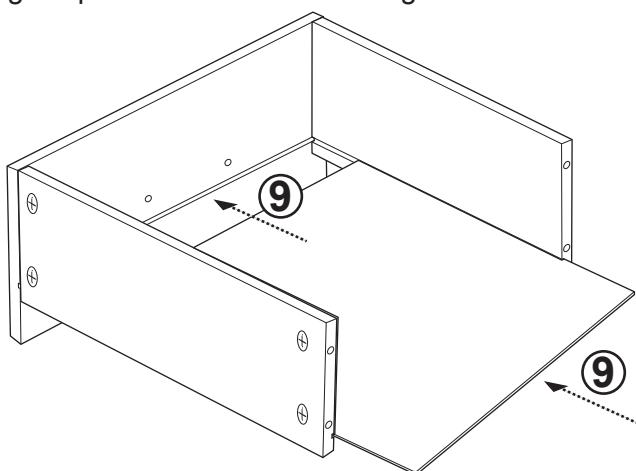

STEP ⑩

Secure a All Drawer Back (from step 7) to the two Sides (from step 8) by inserting the Cam Bolt into the edge holes and then turning the Cam Nut a 1/4 turn to grab the tip of the Cam Bolt.

Repeat for the two remaining Tower Drawers.

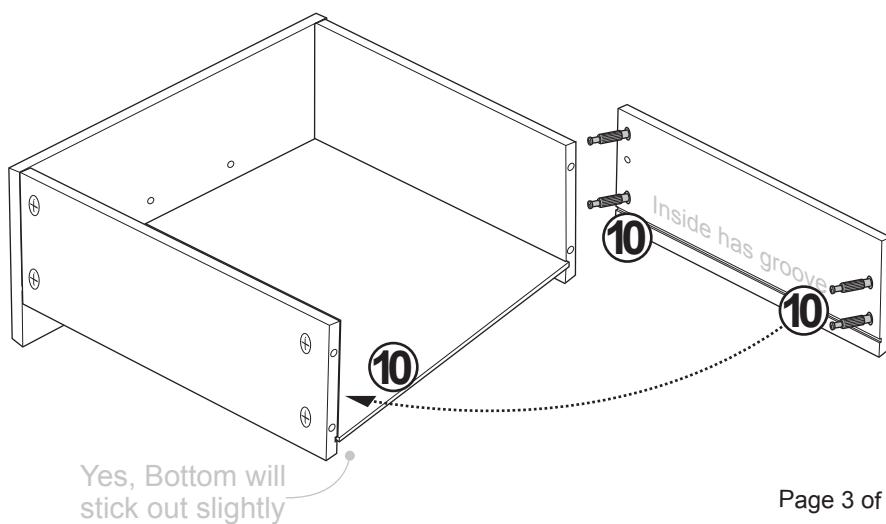


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

Drawers - Steps **5** to **16** continued

STEP **10** continued

Add Handle using (2) Long Pan Head Screws.


Repeat for the two remaining Tower Drawers.

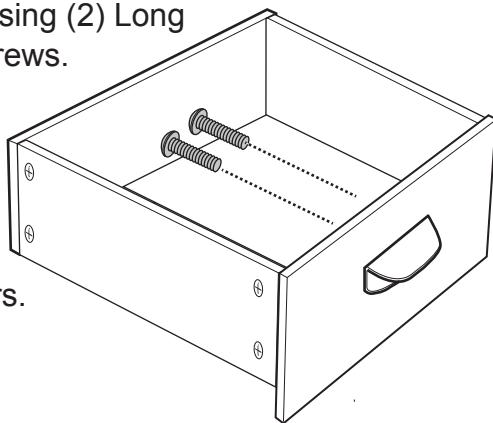

STEP **11**

Working from the inside (groove) of the Desk Drawer, hold the Lock with the latch facing **up** and push the cylinder of the Lock into the hole.


Use (4) Short Screws to secure the Lock's back plate to the inside of the Desk Drawer.

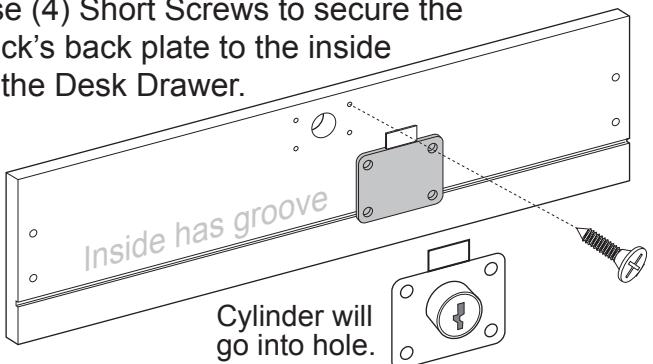

STEP **12**


Working from the inside (groove) of the Desk Drawer Front, insert (4) Cam Bolts into the side holes.

Be sure the groove is to the inside.

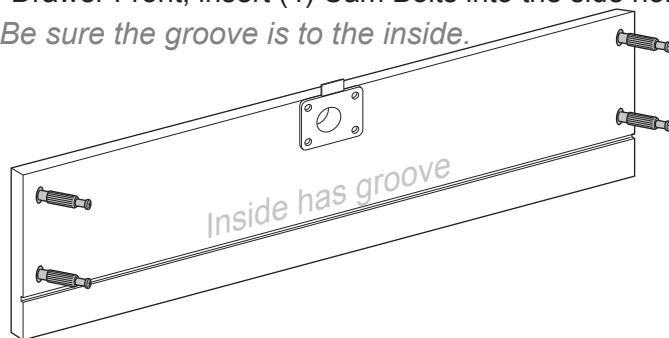


STEP **13**

Working from the inside (groove) of the Desk Drawer Back, insert (4) Cam Bolts into the side holes.

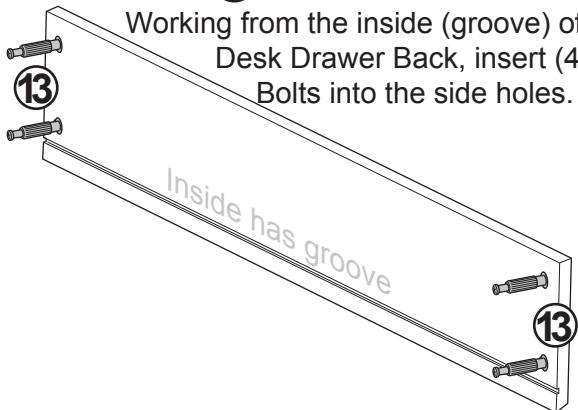

STEP **14**


Secure two All Drawer Sides to the Desk Drawer Front (from step 12) by inserting the Cam Bolt into the edge holes and then turning the Cam Nut a 1/4 turn to grab the tip of the Cam Bolt.

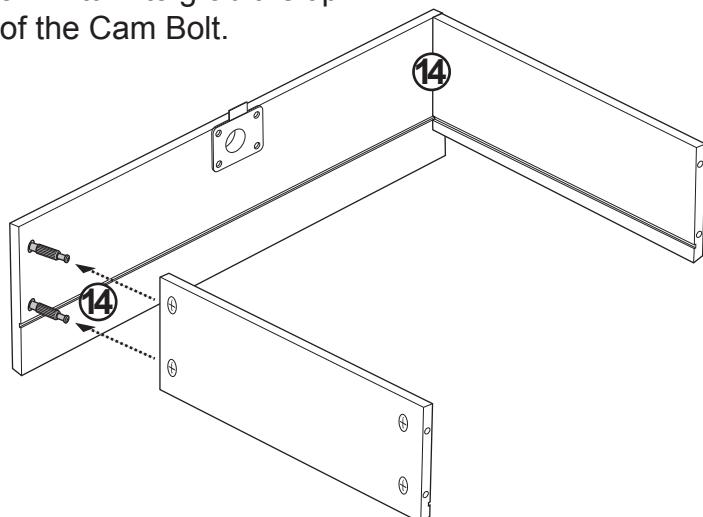

STEP **15**

With the white surface up, align the edges of the Desk Drawer Bottom with the grooves on the Sides and slide it in.

Be sure the edge inserts into the front groove to prevent sagging.


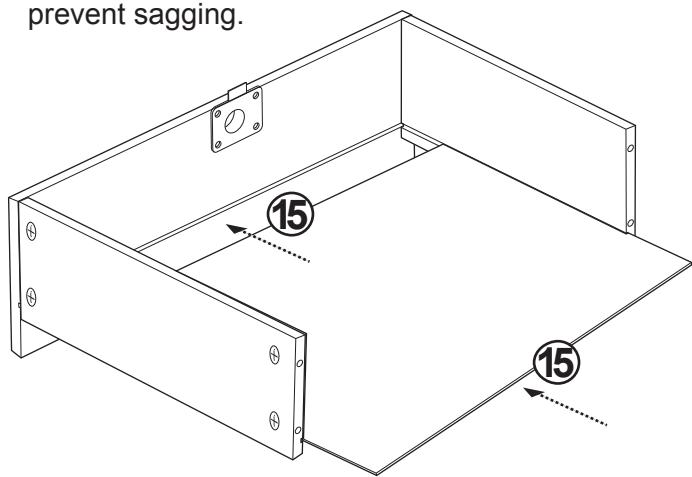


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS


Drawers - Steps **(5) to (16)** continued

STEP **(16)**


Secure a Desk Drawer Back (from step 13) to the two Sides (from step 14) by inserting the Cam Bolt into the edge holes and then turning the Cam Nut a 1/4 turn to grab the tip of the Cam Bolt.

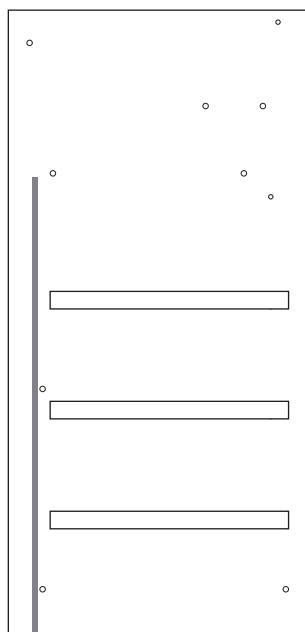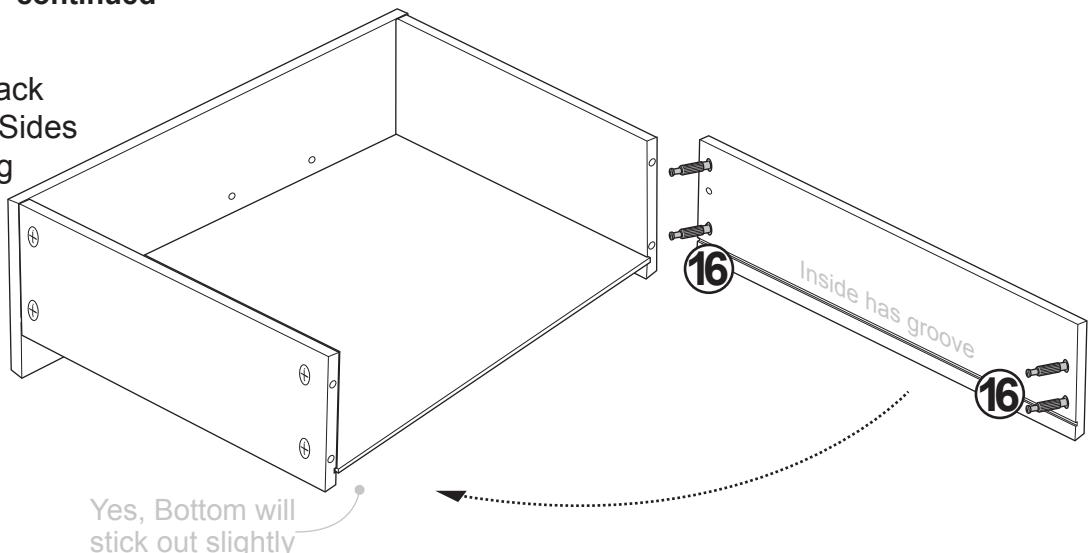


Desk Left Wall
Outside Surface

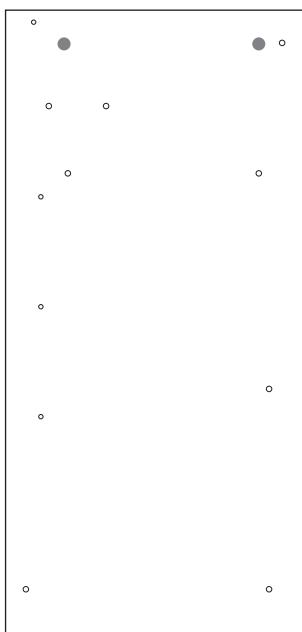

Desk Left Wall
Inside Surface

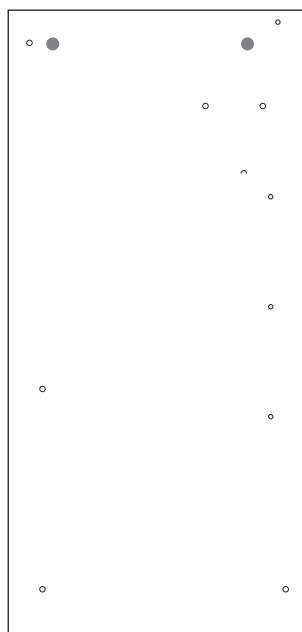

Desk Right Wall
Inside Surface

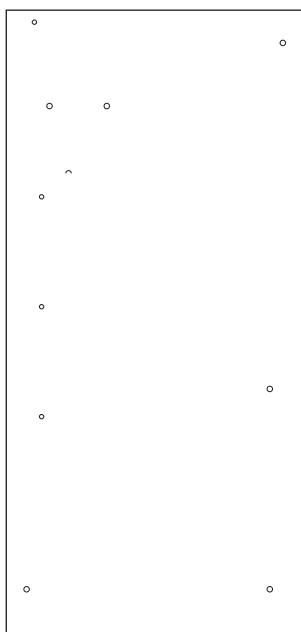

Desk Right Wall
Outside Surface



(8) Long Phillips
Head Screws



(8) Cam
Inserts



(2) Small Desk Wall Support




(1) Large Desk Wall Support

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS



STEP 17

Drop (8) Cam Inserts into the corner holes of all 3 Desk Wall Rails, making sure the circle faces out.

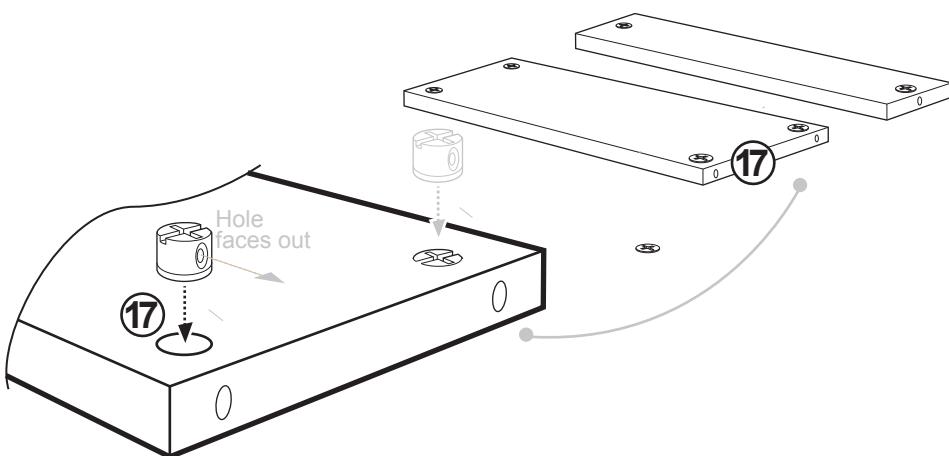

STEP 18

Working from the inside surface of the Desk Left Wall, align the Large Desk Wall Support with the horizontal pair of holes.

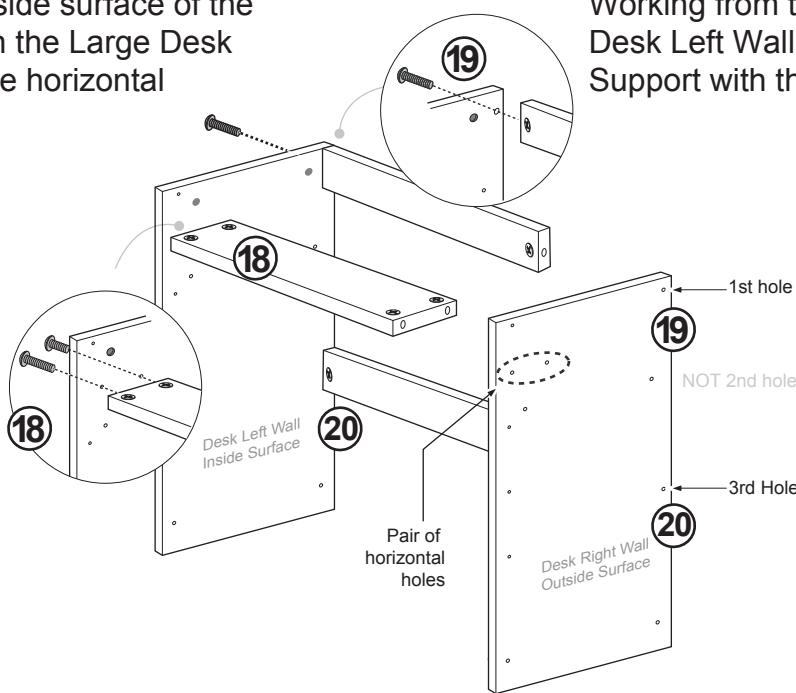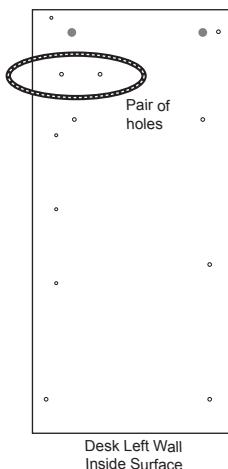


STEP 19


Working from the inside surface of the Desk Left Wall, align a Small Desk Wall Support with the hole in the corner.

STEP 20


Align the other Support with the 3rd hole down.

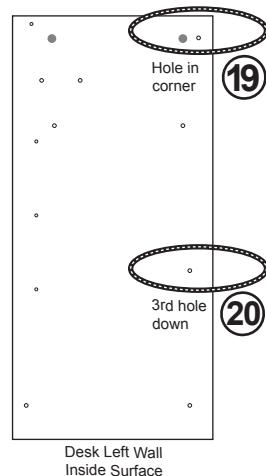


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS




Cam Nuts

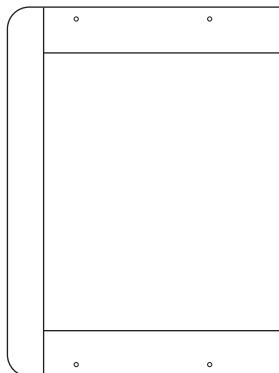


(1) Desk Top

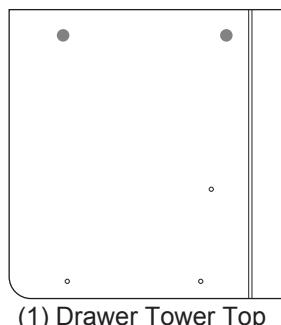


(1) Drawer Tower Top

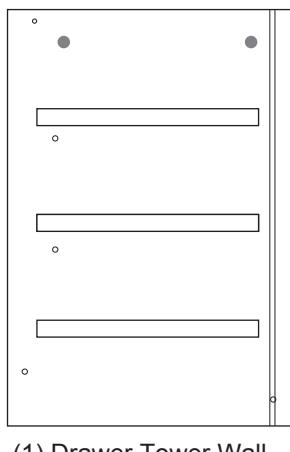

(1) Drawer Tower Wall

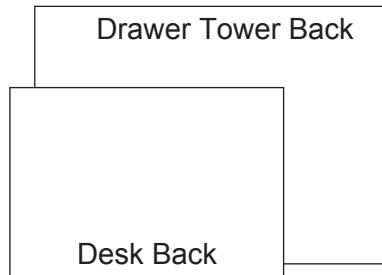

Desk Back

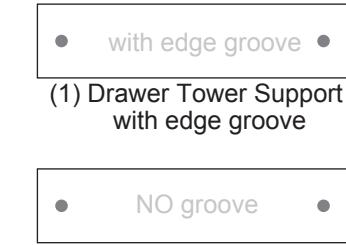


(1) Drawer Tower Support with edge groove

(1) Drawer Tower Support NO edge groove


STEP 21

Drop Cam Inserts into the holes on the Supports and Drawer Tower Top, making sure the circle faces out.

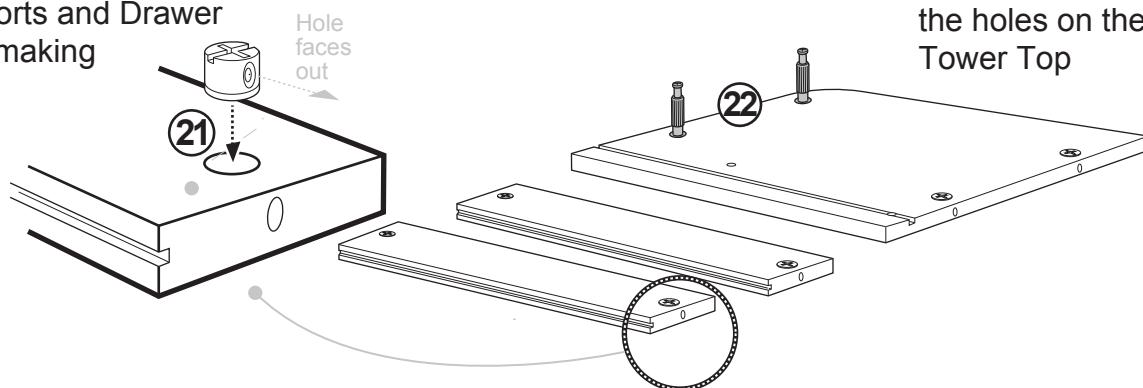


STEP 23

Secure the Rail with NO GROOVE to the bottom of the Tower Wall.

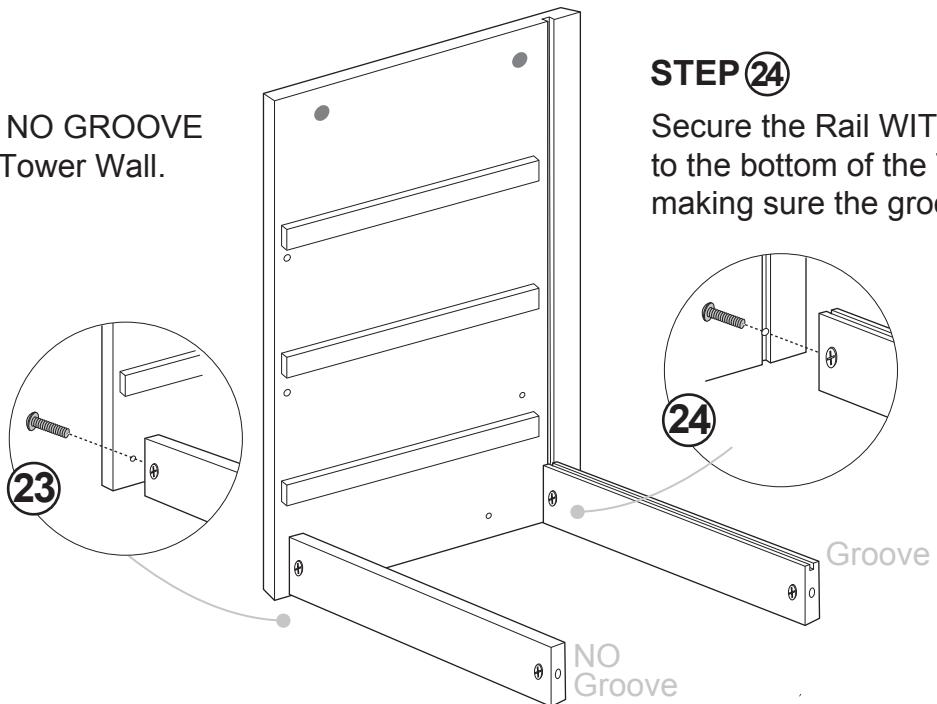

STEP 24


Secure the Rail WITH a groove to the bottom of the Tower Wall, making sure the grooves align.

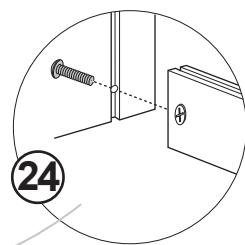

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS


STEP 25

Connect the Tower Wall/Support Assembly (from Step 24) to the Desk Assembly (from step 20) by securing the two Supports at the bottom of the Tower to the Desk Wall.

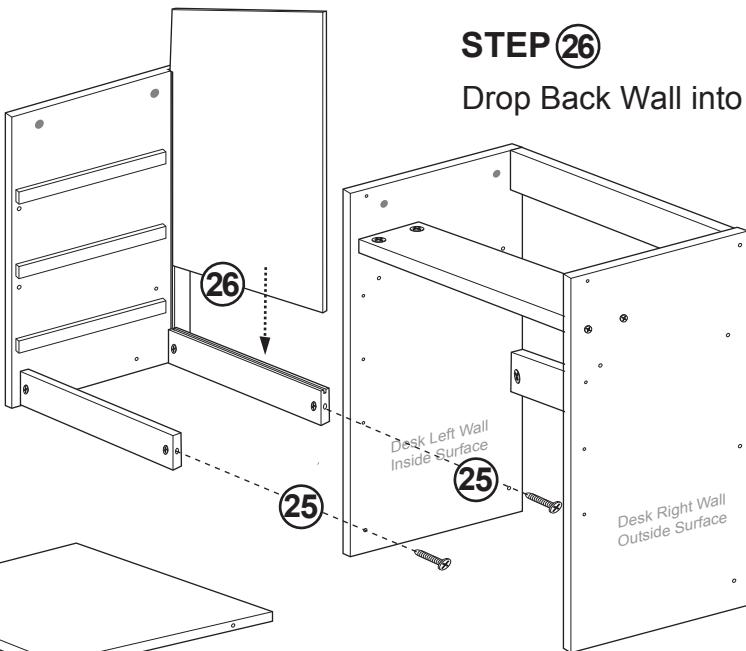


STEP 26

Drop Back Wall into groove

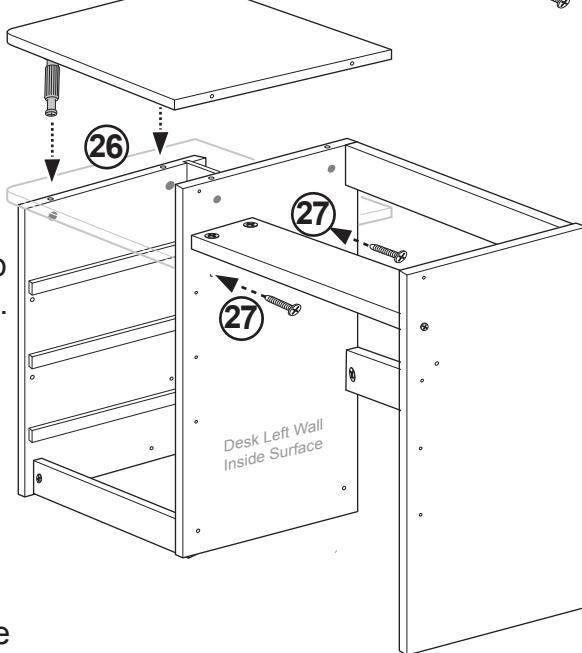

STEP 26

Install the Drawer Tower Top (from Step 22) on top of the Drawer Tower by aligning the Cam Posts with the (2) holes on the top edge of Drawer Tower Wall.

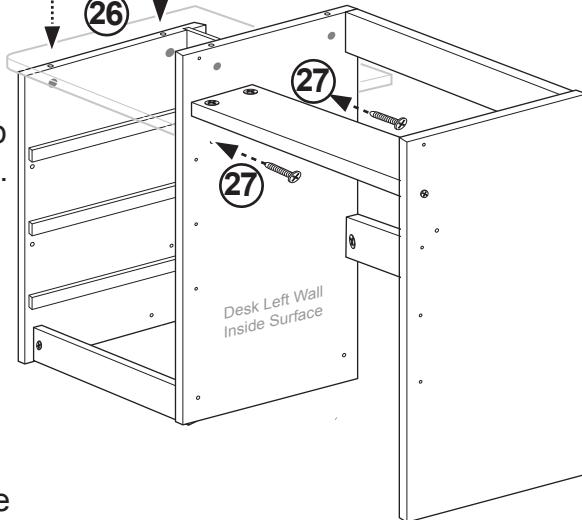

STEP 27


Reach under Top to tighten both Cam Nuts.

STEP 28

Insert (4) Cam Bolts into the holes underneath the Desk Top.

STEP 29




Reach under Top to tighten (4) Cam Nuts.

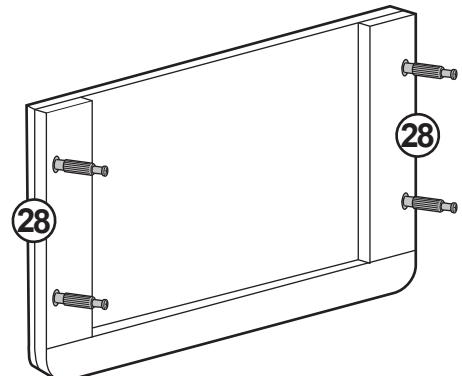


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

STEP 30

Drop (10) Cam Inserts into the holes on the Mirror Frame Shelves, Braces and Top, making sure the circle faces out.

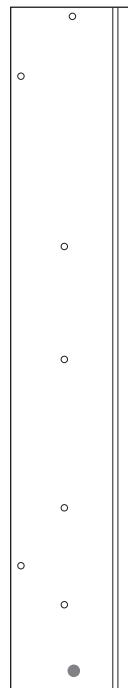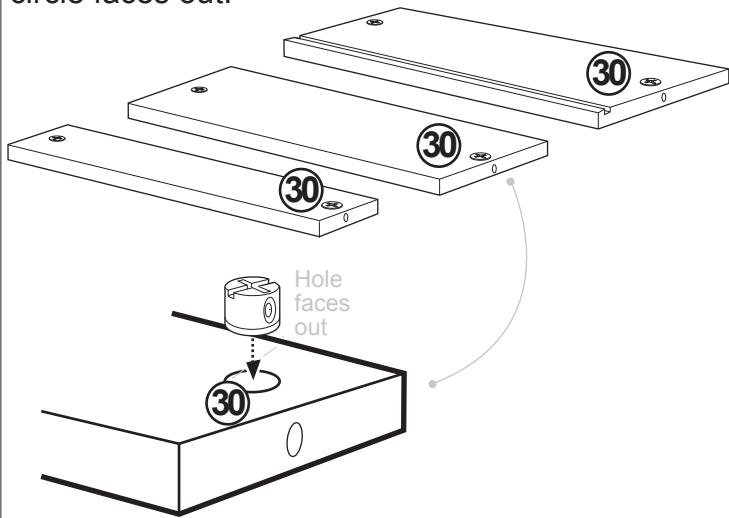


(1) Mirror Frame Top



(2) Mirror Frame Braces



(2) Mirror Frame Shelves

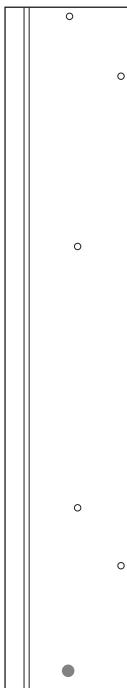

(1) Right Mirror Frame

(1) Left Mirror Frame

STEP 31

Secure the Mirror Frame Top to the Left and Right Mirror Frame Sides.

STEP 32

Secure a Mirror Frame Brace directly below the Top.

STEP 33

Secure a Mirror Frame Shelf in the middle

STEP 34


Secure a second Mirror Frame Shelf near the bottom

STEP 35

Secure a second Mirror Frame Brace directly below the bottom Shelf.

STEP 36

Slide Back into groove.


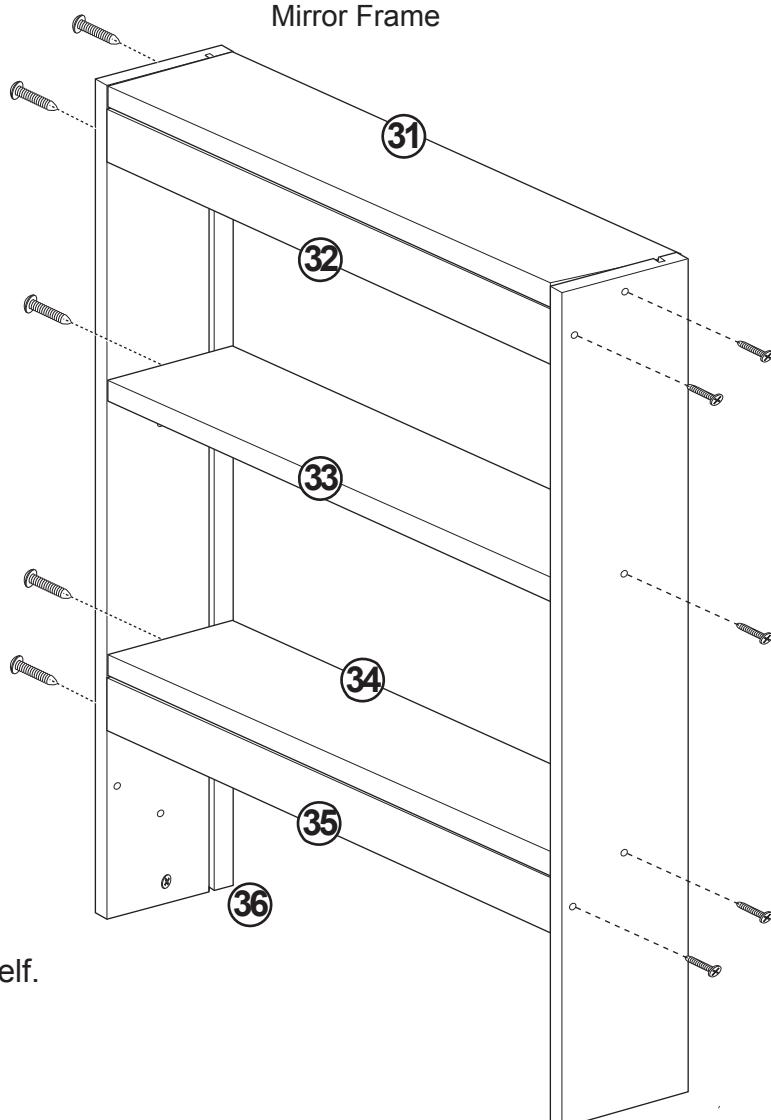


MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS




STEP 37

Drop (8) Cam Inserts into the holes on the Tower Shelves.

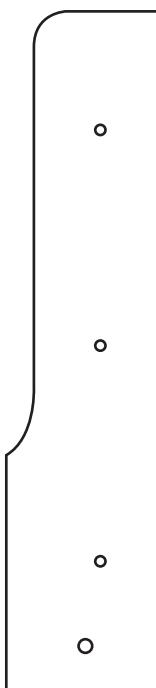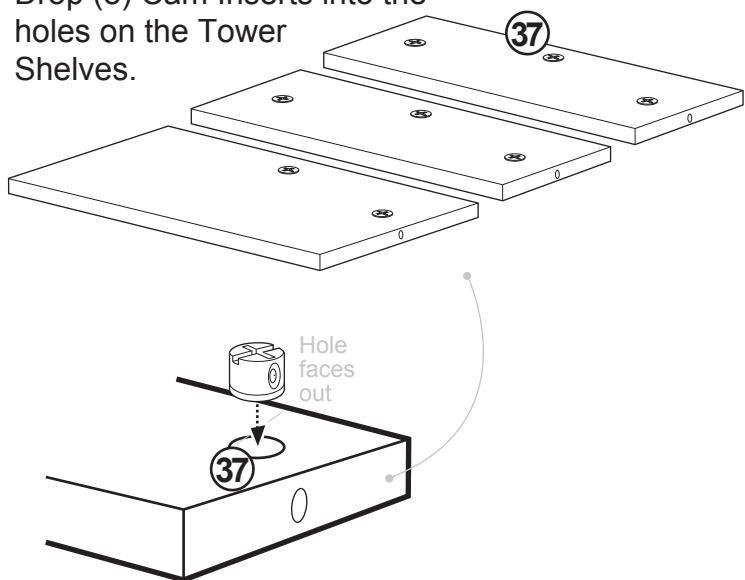


(1) Tower Side Wall

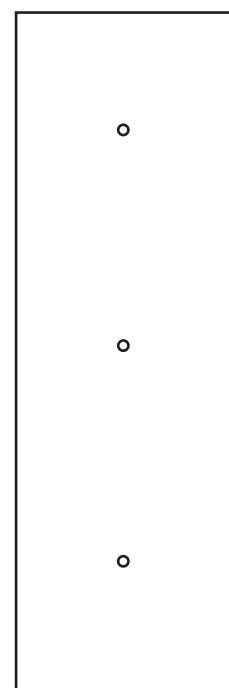

(1) Tower Back Wall



(2) Tower Upper Shelves

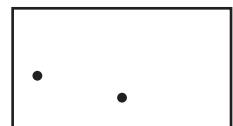


(1) Tower Lower Shelves

Deeper than upper shelves

STEP 38


Secure the 2 Upper Shelves to the Back Wall and the Lower Shelf towards the bottom.

The Lower Shelf is deeper and will stick out more.

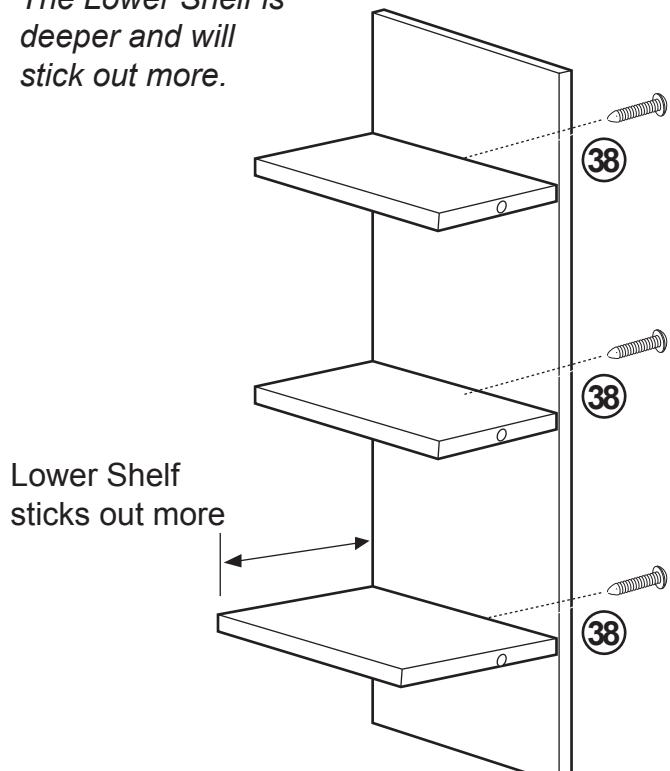

STEP 39


Align Tower Side Wall with sides of the 3 Tower Shelves and secure with long screw.

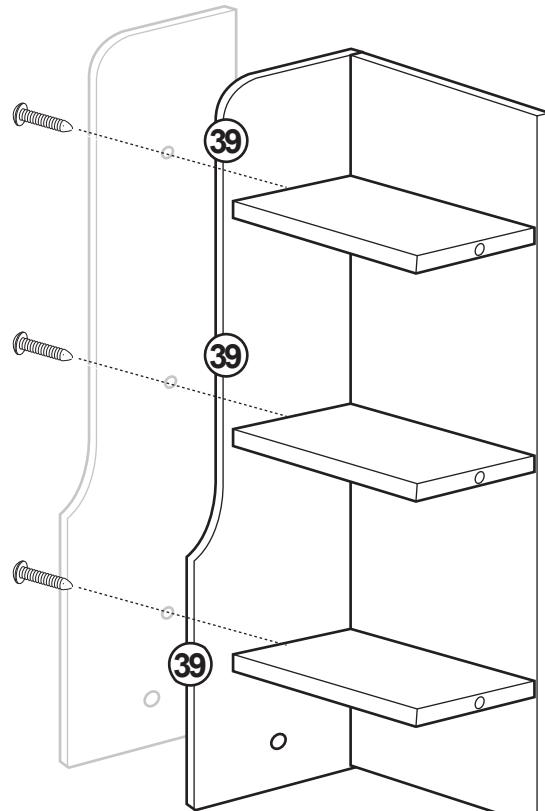

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS


STEP 40

Install (3) Cam Bolts on Top surfaces.

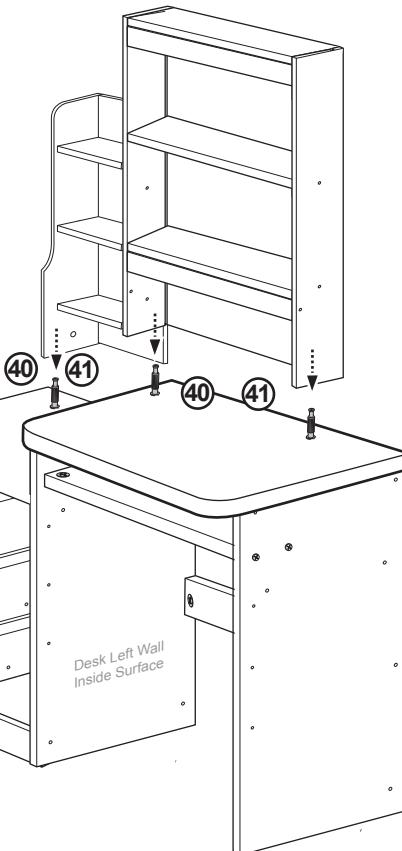

STEP 41

Drop the Mirror Frame and Tower Shelf Assemblies over the Cam Bolts and tighten.

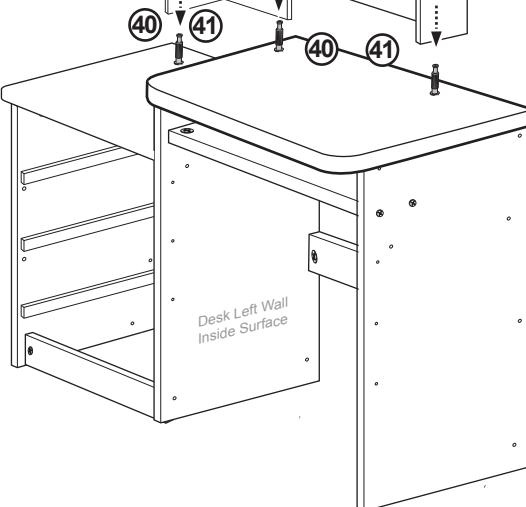

STEP 42


Install (2) Long Screws into left side of Mirror Frame to secure Shelf Tower.



MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS


STEP 43

Separate the Mirror Slider by pinching the release lever and gently pulling the top and bottom apart

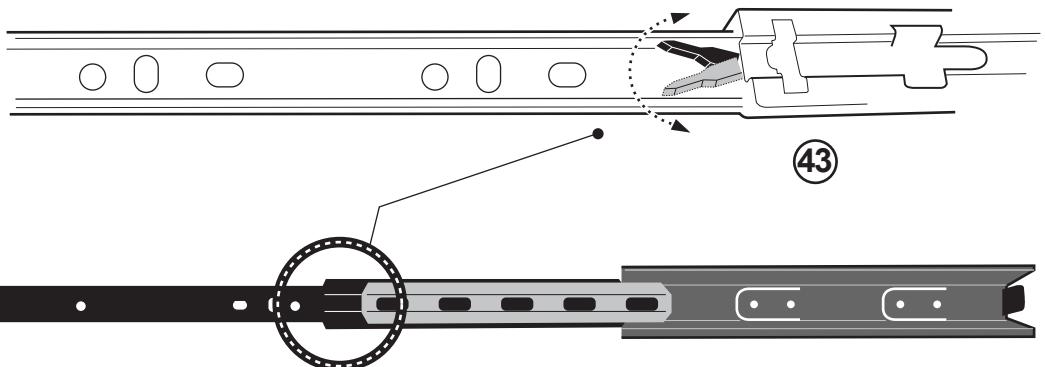

STEP 44

Align the holes on the far ends of the Slide with the holes on the Mirror Frame and secure with two small wood screws.

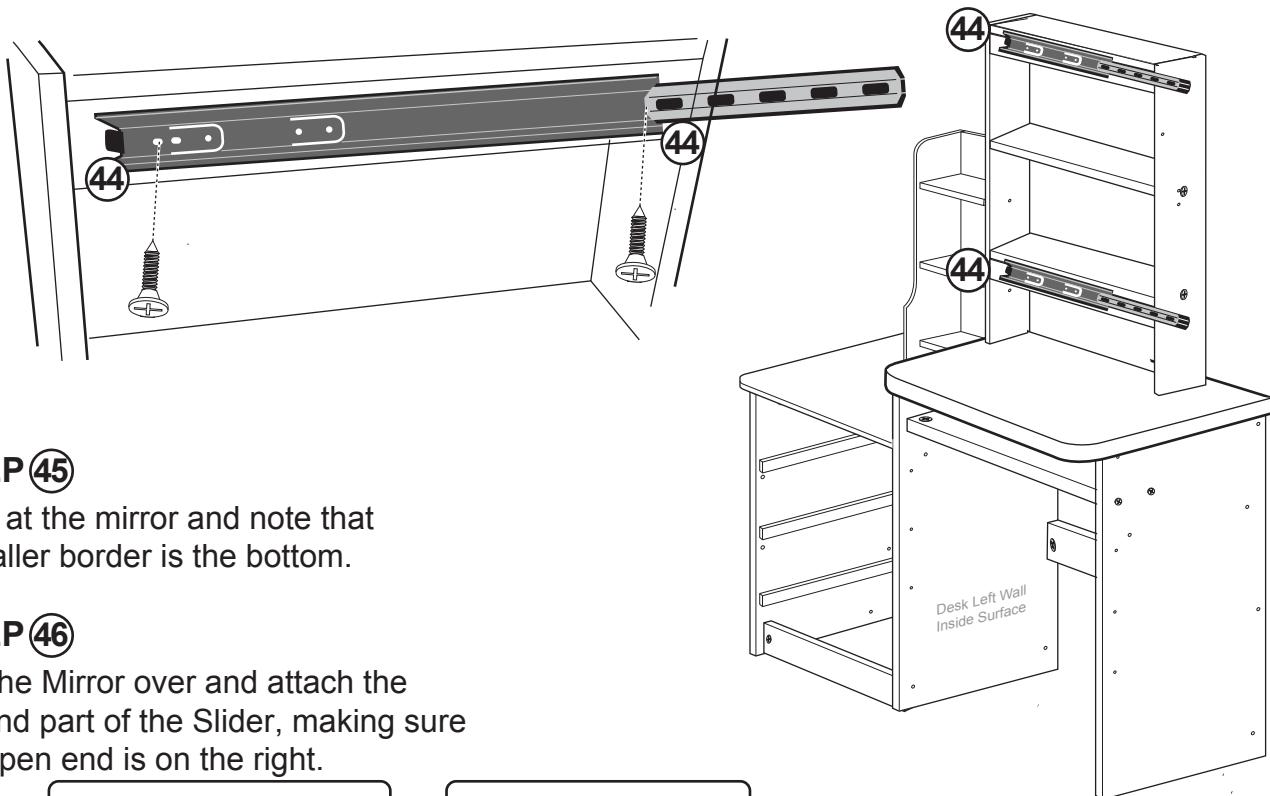


STEP 45

Look at the mirror and note that the taller border is the bottom.

STEP 46

Flip the Mirror over and attach the second part of the Slider, making sure the open end is on the right.

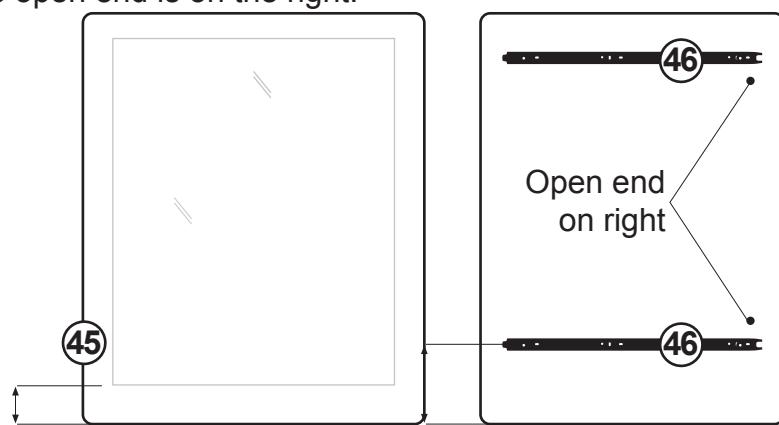


Taller border at the bottom

MAKEUP VANITY SET ASSEMBLY INSTRUCTIONS

STEP 47

Gently slide Mirror sliders together.

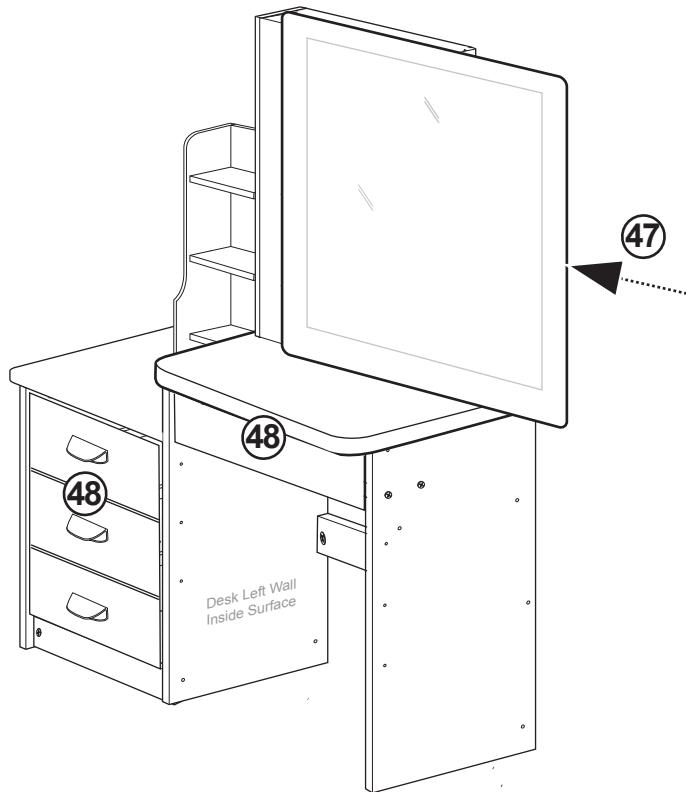

STEP 48

Push drawers into place.

